


APS-3xx.2/ -xAL/ -EV

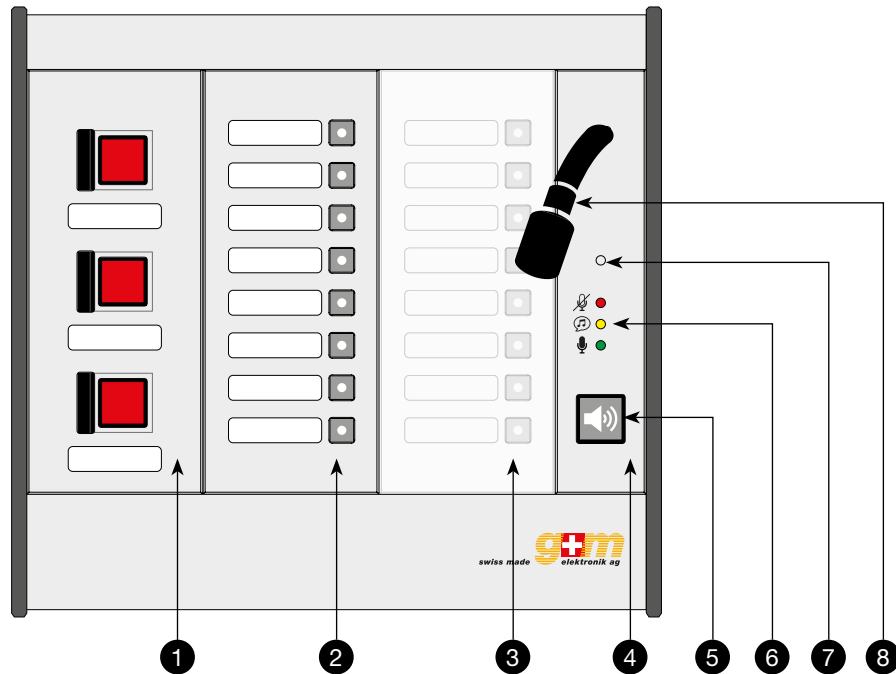

Front view (FRS)

- | | |
|--|---------------------------------------|
| 1 Segment with 3 buttons with protection cover, labeled individually | 5 Button for call |
| 2 Segment with 8 buttons, labeled individually | 6 LED indicators (red, green, yellow) |
| 3 Expansion unit | 7 Buzzer |
| 4 Base segment | 8 Gooseneck microphone |

Description

Designation and function

Microphone panel for the handling of a loud-speaker system

Use of the microphone panel

Together with an input module APS-16.2 / APS-16.3

Settings on the microphone panel

Address, volume

Functions of the controls

According to the labels and programming

Priorities of the functions

According to the programming of the processor module APS-990

Connection cable to the input module

GZ-932-C	CPR conform, without safety standard
GZ-932-EV	With safety standard FE 180-E30
GZ-928	Without safety standard
GZ-926-EV	With safety standard FE 180-E30 to E90

Max. cable length: 1000 m

 
Warning – if in use as microphone panel for an Evacuation system

If, in the regular operation, the panel or the microphone will be disconnected, the result is an error message at the loud-speaker system!

Technical specifications


Con. diagram for the socket RJ45 (MC LINK)

- 1 LF (low frequency) input balanced +
- 2 LF (low frequency) input balanced –
- 3 Serial Data (Data-S)
- 4 Supply +17 VDC for microphone consoles (max. 400 mA)
- 5 Supply +17 VDC for microphone consoles (max. 400 mA)
- 6 Ground
- 7 Ground
- 8 Ground



Connection diagramm XLR 6 poles (Option)

- 1 Ground
- 2 LF output balanced +
- 3 LF output balanced –
- 4 Not connected
- 5 Serial data (Data-S)
- 6 Supply +17 VDC

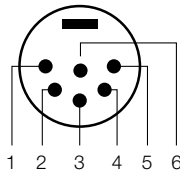

Operating instructions

The red LED «Busy» indicates when the system is already being used by another station.

The orange LED «Chime» indicates a currently played chime melody.

The green LED «Ready» indicates that the system is in operation and ready for an announcement.

An announcement is started by pressing the call button.

To set the address, press keys 1, 3 and 5 simultaneously on any segment. Then the PTT key flashes white and the address can be set in binary format (1 to 255). Afterwards confirm the setting by pressing the PTT button. The address is set to 1 by default.

To adjust the volume, press buttons 2, 4 and 6 simultaneously on any segment. Then the PTT key flashes magenta and the volume can be adjusted (level 1 to 8). Afterwards confirm the setting by pressing the PTT button. The volume is set to level 8 by default.

Data

Announcements

Via electret microphone

Version

EV (for Evacuation systems; with integrated generator for the periodica surveillance by an APS-177)

LF output

Line (0 dBu = 0.775 V / 600 Ohm; balanced; with transformer for galvanic isolation)

Data transfer between the panel and processor module APS-990

Via bus Data-S

Dimensions (H x W x D in mm)

APS-308.2	180 x 100 x 136
APS-364.2	180 x 530 x 136

Lighting of the buttons

Parallel to the function or independent

Functions of the elements

According to the programming of the panel

LED displays (operating state)

Red	System busy (higher priority active)
Orange	Gong in action (option)
Green	System free (ready to talk)

Priorities of the functions

According to the programming of the APS-990



Versions


APS-308.2-EV	8 buttons
APS-308.2-3AL-EV	8 buttons + 3 additional buttons
APS-308.2-6AL-EV	8 buttons + 6 additional buttons
APS-316.2-EV	16 buttons
APS-316.2-3AL-EV	16 buttons + 3 additional buttons
APS-324.2-EV	24 buttons
APS-324.2-3AL-EV	24 buttons + 3 additional buttons
APS-332.2-EV	32 buttons
APS-332.2-3AL-EV	32 buttons + 3 additional buttons
APS-340.2-EV	40 buttons
APS-340.2-3AL-EV	40 buttons + 3 additional buttons
APS-348.2-EV	48 buttons
APS-348.2-3AL-EV	48 buttons + 3 additional buttons
APS-356.2-EV	56 buttons
APS-364.2-EV	64 buttons

Accessories

63-6112102-01-01	Connection cable RJ45-RJ45
63-5311289-01-01	Connection cable XLR-RJ45
63-6112210-01-01	RJ45 Locking clip
63-6112211-01-01	Tool for RJ45 locking

Dimensions in mm

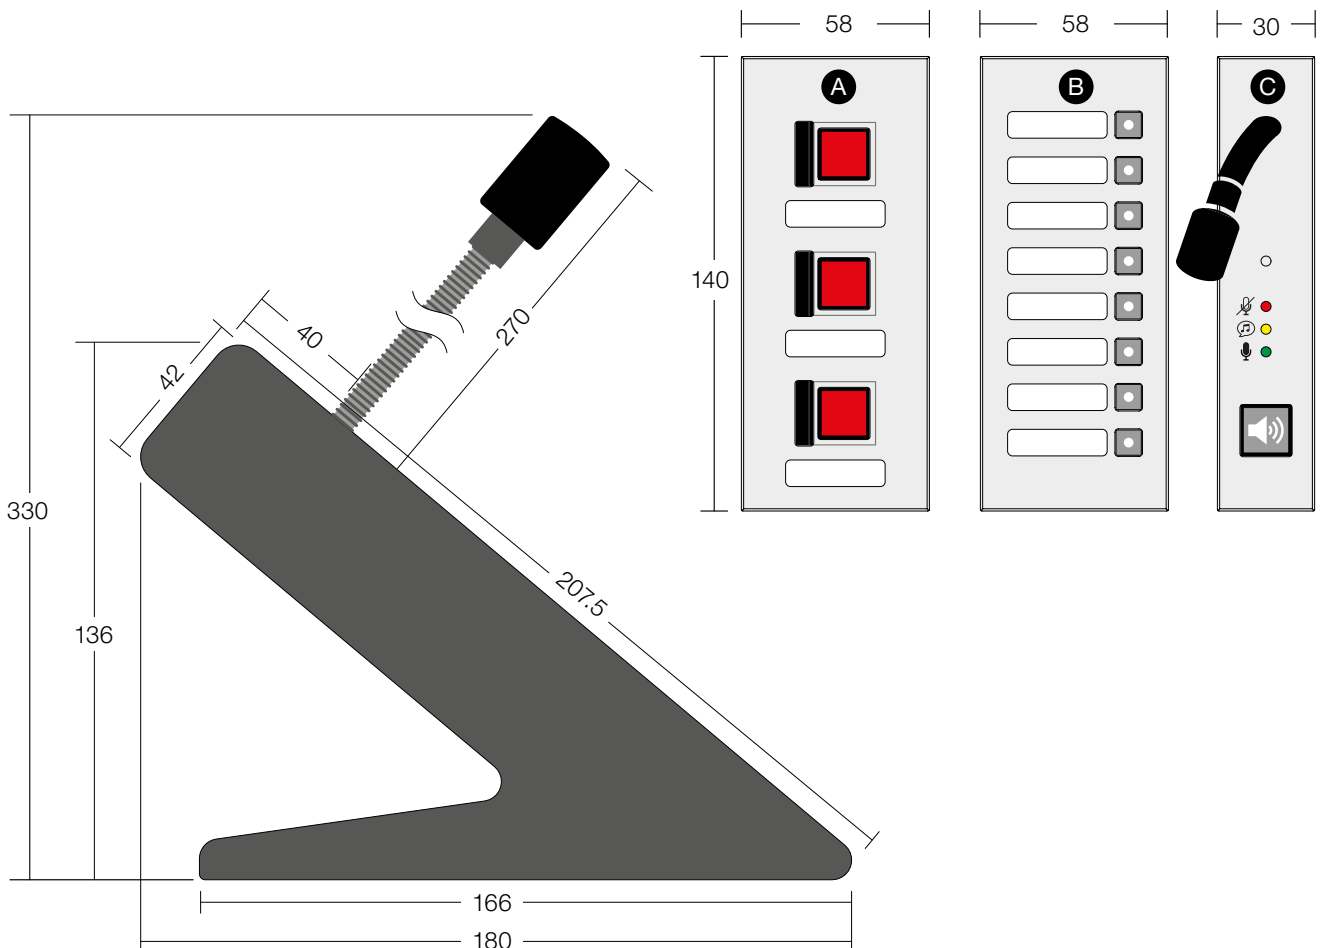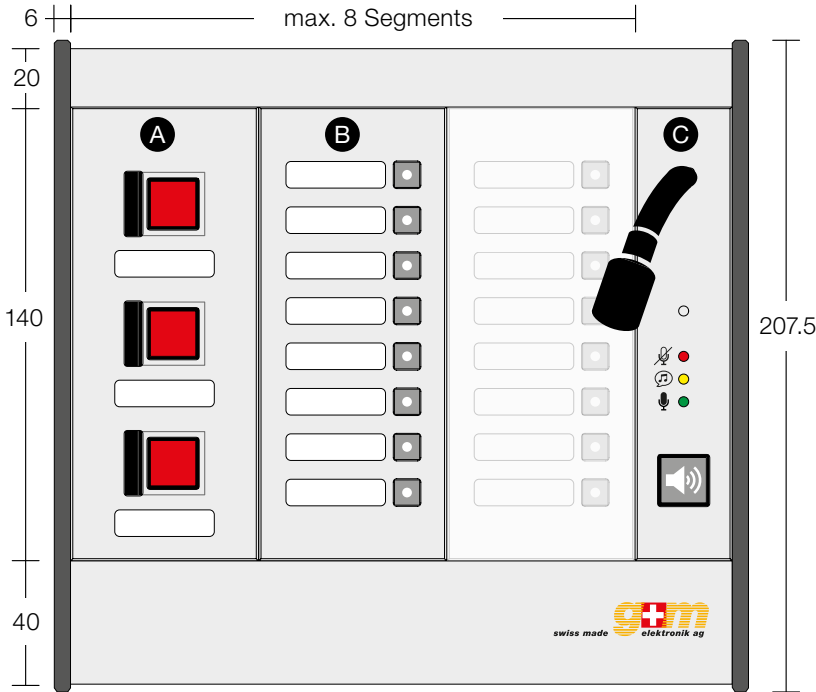

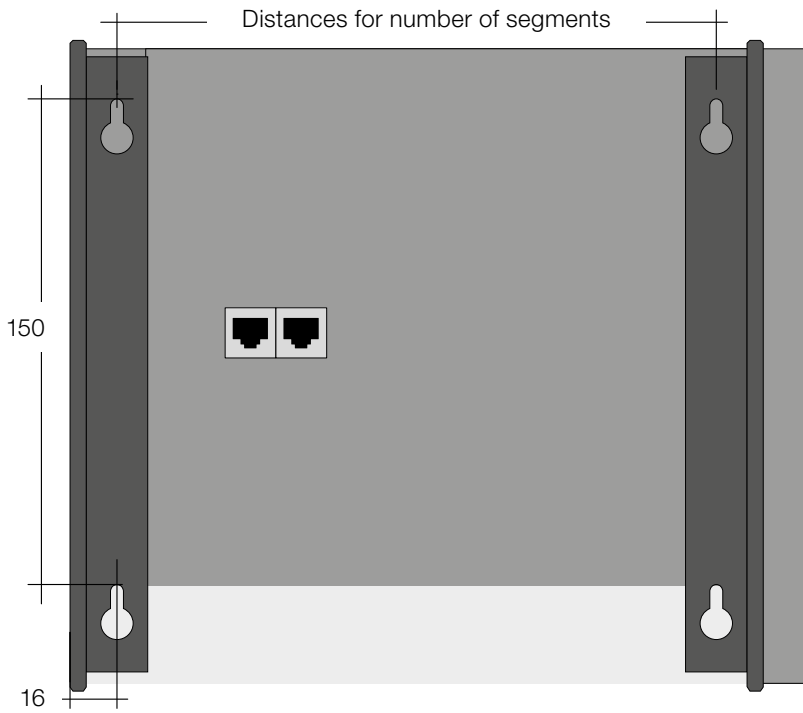

Wall-mounted model

Distances for number of segments
(including 1 segment C with microphone)

1 Segment:	67 mm
2 Segments:	125 mm
3 Segments:	183 mm
4 Segments:	241 mm
5 Segments:	299 mm
6 Segments:	357 mm
7 Segments:	415 mm
8 Segments:	473 mm