


APS-60

Monitoring speaker module for AF busses

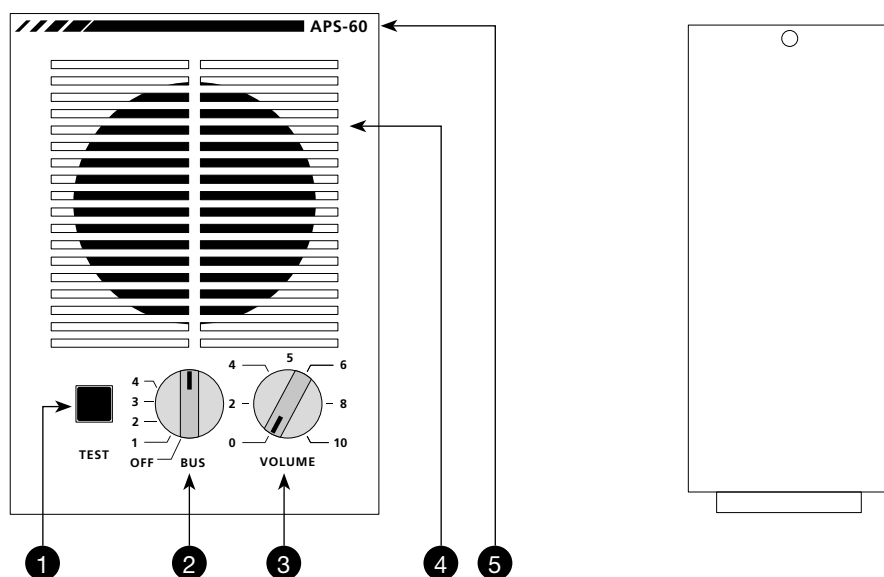

Front view (FRS)

- 1 Pulse button for pre-listening
- 2 Selector switch for AF bus
- 3 Volume control
- 4 Monitoring loudspeaker
- 5 Model code

Rear view (RWS)

Description

Designation and function

Module for monitoring of active audio signals

Sound source

AF Bus 1–4

Function of the module

According to the programming of the APS-990 processor module

Volume control

Does affect the tone in the monitoring loudspeaker

Security

The operating knobs can be removed (with pliers) – operation only then possible with the aid of a screw-driver; an additional cover makes the operation impossible (prevents operating errors)

Rear panel (RWS)

RWS-00

Data

Removal of the module from a unit

- a) CAUTION: the amplifier system must be disconnected from mains and battery supply!
- b) Remove the covering strips at the cabinet
- c) Unscrew the mounting screws
- d) Pulling out the module forwards

Selector switch for AF-Bus (Bus 1–4 and OFF = OFF)

The selector switch sets the integrated amplifier to the desired bus (1– 4) or to OFF. The signal of the selected bus is audible then in the monitoring speaker without an interruption on the external speakers (= monitoring).

The volume of the monitoring loudspeaker is adjustable

General

The power of the integrated amplifier for the monitoring loudspeaker is 2 W

Data transfer between APS-60 and APS-990

Via the I²C bus

Important

The use must be in accordance with the programming!