



APS-26

Remote control for APS-26

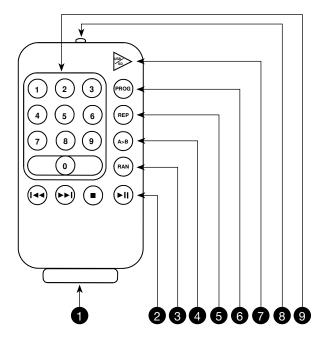

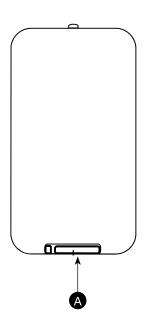

Front view

- 1 Battery protection (remove before use)
- 2 Buttons Play/Pause, Stop, Next, Previous
- 3 RAN: Random button
- 4 A>B: Zone memory button
- 5 REP: Repeat button
- 6 PROG: Program button
- 7 Button USB/SD (no function)
- 8 Infrared transmitter diode
- 9 Numeric buttons 0-9

Rear View

A Battery (Simultaneously press the latch inwards and pull out the battery holder)

Functions of the remote control

1. Programmed playback

Press the PROG button one time and select the number of the first track. The number is visible in the display. When the track is audible press the PROG button again. Select the number of the second track etc. Then press the PLAY button and all memorized traks will be played. To cancel the programming, press the STOP button two times.

2. Repeat mode

- a) Press the «REP» button once and the display shows «R 1»: Repeated playback of the shown track
- b) Press the «REP» button second times and the display shows «R ALL»: Repeated playback of all tracks
- c) Press the «REP» button three times and the display will eliminate «R ALL»: Cancel the repeated playback function



3. Random playback

- a) Press the RAN button one time and the display blinks: The random playback is ready
- b) Press the RAN button once again and the display does not blink anymore: The random function is stopped.

4. Repeated playback of a zone within a track

- a) Start the playback of a track, press the button at the beginning and at the end of a zone: The area between this two points is repeated endless
- b) Press the button once again and the repeated playback is stopped

5. Numeric buttons 0 to 9

For the selection of track numbers

6. Button Play/Pause

Press once to start the playback and once again for a pause.

7. Stop button

Press once to stop the playback. Use the button Play/Pause for continue the playback. Press twice for the last track; to continue the playback at track 001 press the button Play/Pause

8. Previous button

Press once for the previous track

9. Next button

Press once for the next track